




Brake Service Solutions

Problem: Mounting 4x4 pressed hub rotors on a 1" arbor.

- GM & Chrysler 1/2 & 1 ton 4x4 vehicles have splined, pressed hub rotors
- These are difficult to accurately mount on a 1" arbor brake lathe

Solution: 4x4 Pressed Hub Rotor Adapter

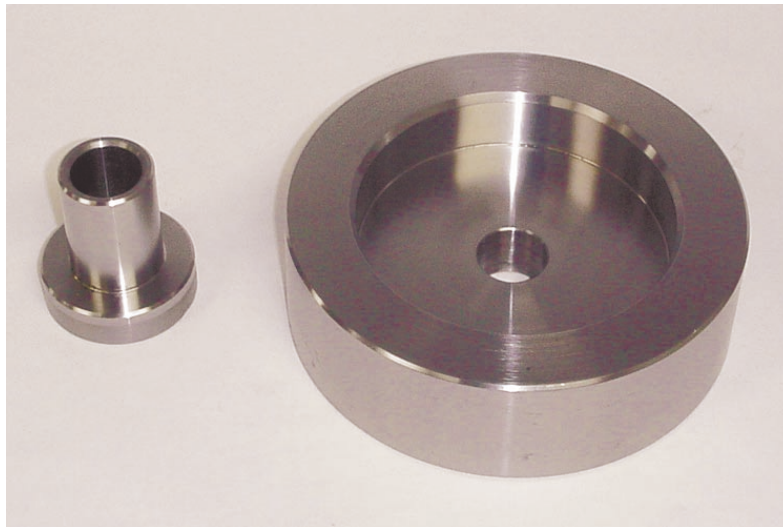

Part No. 940928

- **Easy to use**
 - Simply unbolt rotor/hub assembly from steering knuckle and accurately mount using this adapter
 - No need to purchase a 1" I.D. washer and fiddle with standard brake lathe adapters
 - **No need to bolt rotor/hub assembly to adapter**
- **Accurate mounting every time** - assembly centers on the adapter the same way it does on the vehicle

HENNESSY INDUSTRIES, INC.

Manufacturer of Ammco®, Coats® and BADA® Automobile Service Equipment, Tools and Accessories
1601 J.P. Hennessy Drive LaVergne, TN 37086-3565 800-688-6496 or 615-641-7533
Hennessy Canada: 2430 Lucknow Drive, Unite 9, Mississauga, Ontario L5S 1V3 905-672-9440
www.ammcoats.com